


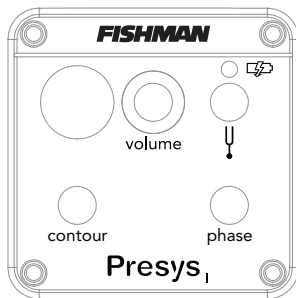 
FISHMAN[®]

USER GUIDE PRESYS

fishman.com

Presys Quick Start

- 1. Set the controls** • Set **volume** off. Set the **bass**, **middle** and **treble** controls to center.
- 2. Plug in** • Connect the Presys to an amplifier or PA with a ¼-inch instrument cable. The  light will flash once quickly to indicate it has switched on.
- 3. Turn up** • Raise the **volume** and adjust the **bass**, **middle** and **treble** to your liking.



Presys Controls

Volume • For cleanest signal, set the **volume** knob as high as possible, without causing distortion or feedback.

Bass • Boost here to add depth and weight to the sound of the guitar.

Middle • Turn **middle** knob all the way left for smooth "scooped out" tone at high volume levels. Raise **middle** knob to the right of center to add midrange "bite" to the sound.

Treble • Boost to cut through the mix. Cut to mellow and subdue the sound.

Phase • Use the phase switch to improve bass response at low volume and suppress feedback at high volume.

Tuner • Use the tuner lights as shown below to tune your instrument.



"A" note
below pitch




"A" note
in tune



"A" note
above pitch



 
"A#" note
in tune

When the  lamp lights steadily it is time to change the **battery**. To conserve the battery, unplug the instrument when not in use. Replace battery by flipping open preamp body using the latch located above the Fishman logo. Observe correct polarity during installation.

Sample EQ Settings


Fingerstyle

This will add fullness to the bass and definition to the treble.

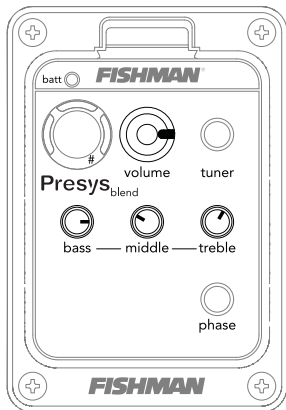


“Scooped” Mid

 This setting emphasizes extreme bass and treble.

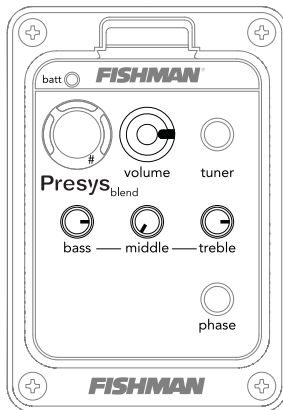


Strummer

 A good setting for strumming chords.

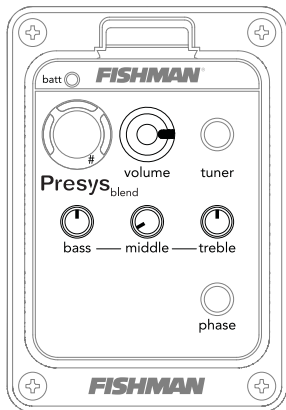

Cut Through the Mix

 When you need to be heard through a loud band.

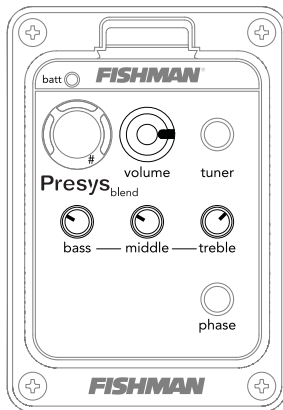

FISHMAN

www.fishman.com